 

ZIKKER

Portable Wireless Charger for Apple Watch



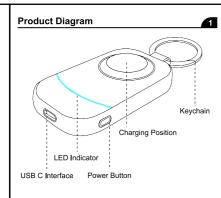

Technical Specifications

Model: D3

Product Weight: 0.18 lb


Product Dimensions: 3.03 x 1.89 x 0.71 inch

Battery Type: Polymer Battery

Battery Capacity: 2500mAh

Maximum Input: 5V/2A Charger Power: 2.5W


Compatibility: Apple Watch 10/9/8/Ultra/7/6/5/4/3/2/1/SE

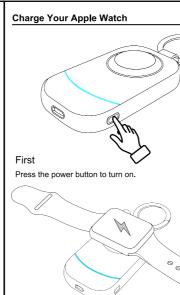

Second


Place your Apple Watch on the wireless charging area. it will automatically begin charging the Apple Watch.

Charge Your Power Bank

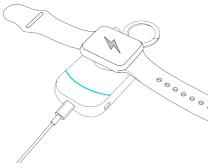

- 1. For best results, use a 5V/2A power adapter to connect the power bank.
- 2. You can also connect the power bank to a computer's USB port to charge it.
- 3. While charging, the LED power indicator will blink sequentially.
- 4. When fully charged, the LED power indicator will remain solid blue.
- 5. You can also charge your Apple Watch while the power bank is charging.

 Charging Instructions



- A solid blue light indicates 66%-100% power remaining.
- One blue light fading indicates 34%-65% power remaining.
- An orange light indicates 1%-33% power remaining. 2. Once the Apple Watch is fully charged, the power bank will automatically shut off within 30 seconds of
- disconnection. The watch takes 1-3 hours to fully charge, depending on your watch model. 3. The power bank takes approximately 2-3 hours to fully
- charge, though actual time may vary. 4. If the power bank or Apple Watch isn't charging, check the connection cable and charging accessories for any
- issues. Ensure they are properly connected. It's recommended to use a certified power adapter. 5. Due to conversion rates, the power bank's capacity
- may differ from the actual rechargeable capacity.
- 6. If the power bank does not turn on due to short-circuit protection, recharge it to reset and activate it.

Safety Information

- 1. Keep the product stored at a temperature between 50°F and 95°F(10°C to 35°C).
- 2. Do not drop, disassemble, puncture, or attempt to repair the power bank yourself.
- 3. Avoid exposing the power bank to fire, high temperatures, or water.
- 4. Stop using the power bank immediately if you notice any abnormalities, such as swelling or damage to the device being charged.
- 5. This device is not suitable for use by children or individuals with limited physical, sensory, or mental capabilities unless supervised by a responsible adult. Keep it out of reach of children and do not allow them to use it as a toy.
- 6. Do not leave the product in a car for extended periods. especially in direct sunlight.
- 7. Avoid inserting foreign objects into the product's ports.
- 8. Charge the power bank at least once every three months to maintain it's functionality.

Failure to follow these safety instructions may result in fire, electric shock, damage, or injury.

Package Contents

- 1 Portable Wireless Charger
- 1 USB-C Charging Cable
- 1 User Manual

Manufacturer: Shenzhen Huier Industrial Co., LTD Address: No. 401, Songgang Section, Guangshen Road, Honggiaotou Community, Yanluo Street, Baoan District, Shenzhen, Guangdong Province, China

Email: support@zikker.com.cn



